



UNIT CARE

GOLDEN RULES

- Place a 5-gallon container and a large strainer under the yellow hopper spout.
- Make sure your shaft pin is centered in the shaft prior to putting on your outer basket.
- To begin, hand drop 4-6 eggs in the machine to allow it to balance. Load clean eggs 1 flat at a time.
- After each case of eggs (30 dozen), turn off the machine and empty the shells from the inner basket using a spatula. Do not bang the baskets when emptying shells or insert hand while basket is in motion.
- Cover the container and store in the cold box for at least 20-30 minutes to allow the eggs to rest before using.
- Place removeable parts in a pot washer and sanitize the machine after each use. We recommend cleaning every 4 hours with continuous use or at the end of each 30-dozen session.



CAUTION! Overfilling or failure to empty shells from the inner basket after each use may force shells into the machine. This may cause damage to the unit and/or to the collected liquid egg product.



CAUTION! DO NOT LEAVE THE UNIT UNSANITIZED AFTER USE. The service plan and limited warranty will not cover repairs for overload, misuse or abuse outside of the normal operations of the machine. This may result in additional costs for repairs and possible removal from the rental program

CLEANING & SANITATION

- Remove the white loading bowl. After the machine has completely stopped spinning, lift out the inner basket and remove any shells.
- Unscrew the wingnut at the bottom of the extraction basket and remove the outer basket.
- Loosen the 3 stainless steel knobs on the motor base, twist and lift the yellow hopper away from the base. Place the white loading bowl, inner and outer baskets, and the yellow hopper in an automatic pot washer or hand wash in detergent and rinse in a sanitizing solution of 100-200 ppm chlorine at a minimum of 180°F.
- Clean the shaft and wingnut, rinse thoroughly and replace before next use.
- Wipe motor base with non-corrosive spray cleaner and fresh towel. NEVER use a hose or a direct stream of water on the motor base as this will cause serious damage to the motor's electrical components.
- Under continuous operation, this machine must be sanitized every 4 hours and/or at the end of the extracting period, prior to storing.